



# Installation

Model specific instructions

For:

- [Husqvarna 401 Vitpilen](#)
- [Husqvarna 401 Svartpilen](#)
- [Husqvarna 701 Vitpilen](#)
- [Husqvarna 701 Svartpilen](#)

These instructions are a model specific add-on to the general BoosterPlug installation instructions.


## Installation Tips

- Install the BoosterPlug module as per the general installation papers.
- The picture below should help you locate the AIT sensor where the BoosterPlug is installed.
  - On the 401 Vitpilen and 401 Svartpilen, the AIT sensor is found in front of the air filter box, below the intake tube to the throttle valve and cylinder head
  - On the 701 Vitpilen and 701 Svartpilen, The AIT sensor is located in the air tube between the air filter box and the throttle valve housing.
- You have several choices for the BoosterPlug sensor location, but our favorite place is near the steering head or under the head light. Next to the airbox snorkel air intake hole is another very good spot.
  - Just stick to the simple rules in the general installation instructions for placing the external sensor, and you'll be fine.

## Pictures

For:

- [Husqvarna 401 Vitpilen](#)
- [Husqvarna 401 Svartpilen](#)

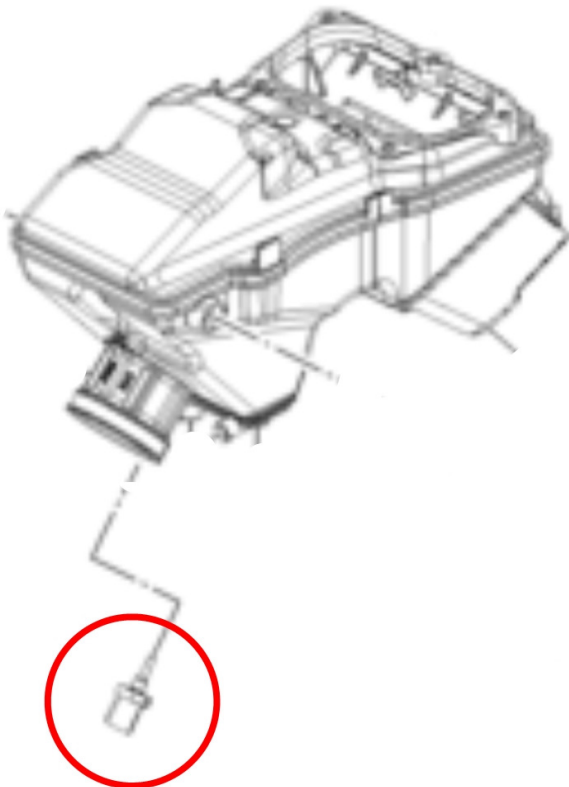

For:

- [Husqvarna 701 Vitpilen](#)
- [Husqvarna 701 Svartpilen](#)

