



Installation

Model specific instructions

These instructions are a model specific add-on to the general BoosterPlug installation instructions.

The general BoosterPlug installation instructions can be found in the "Downloads" section on the BoosterPlug.com website:

<http://www.boosterplug.com/shop/cms-downloads.html>

For Harley Davidson Softail models:

• FXST	Softail Standard
• FLSTN	Softail Deluxe
• FXSTC	Softail Custom
• FXSTB	Softail Night Train
• FXSTD	Softail Deuce
• FLSTSC	Softail Springer Classic
• FLSTC	Heritage Softail Classic
• FLSTSB	Softail Cross Bones
• FXS	Softail Blackline
• FLS	Softail Slim
• FLSS	Softail Slim S
• FXSB	Breakout
• FLSTF	Fat Boy
• FLSTFB	Fat Boy Lo
• FLSTFBS	Fat Boy S
• FXCW	Rocker
• FXCWC	Rocker C


Installation Tips

- Install the BoosterPlug module as per the general installation papers.
- The picture below should help you locate the AIT sensor where the BoosterPlug is installed.
 - The AIT sensor is found in the throttle valve body between the cylinder heads.
 - Remove the air filter assembly to get access to the AIT sensor.
- You have several choices for the BoosterPlug sensor location, but our favorite place is near the steering head or under the head light.
 - Just stick to the simple rules in the general installation instructions for placing the external sensor, and you'll be fine.

Pictures

For:

- All models from 2007 to 2015.

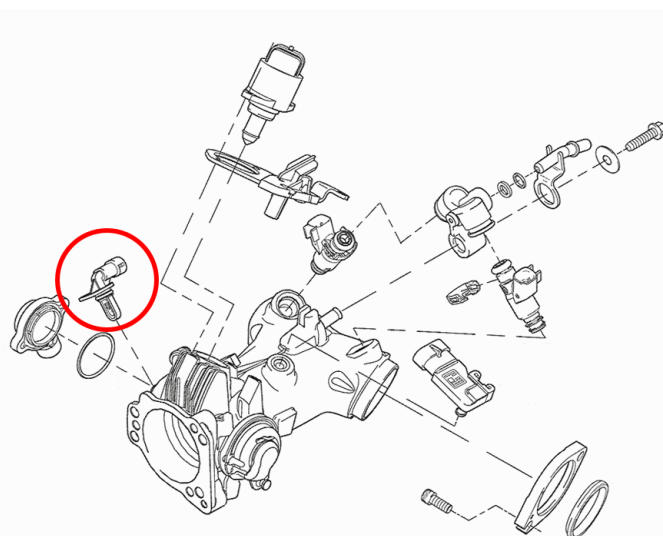

For:

- All models from 2016 and newer.

