

## Denali Light Mount

### BMW R1200GS LC '13-

LAH.07.10400      Instructions Rev:00

### PLEASE READ BEFORE INSTALLING

Denali products should be installed by a qualified, experienced motorcycle technician. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer.

All screws, bolts, and nuts, including all replacement hardware provided by Denali should be tightened to the torque specified in the OEM maintenance manual for your motorcycle. If no torque specifications are provided in the OEM maintenance manual, the following torques may be used:






M5.....	3.5 ft-lbs (5 Nm)
M6.....	7 ft-lbs (9.6 Nm)
M8.....	13 ft-lbs (18 Nm)

All screws, bolts, and nuts should be checked after driving the first 30 miles (50 km) to ensure that all are tightened to the proper torque.


Medium strength liquid thread-locker (i.e., "Loctite") should be used to secure all screws, bolts, and nuts.




**Kit Contents**

<p><b>1</b></p> <p>Rack Bracket (Left)</p>  <p>LAH.07.007 Qty.....1</p>	<p><b>2</b></p> <p>Socket Head Screw</p>  <p>M8x110.....DIN 912 Qty.....2</p>	<p><b>3</b></p> <p>Washer</p>  <p>M8.....DIN 9021 Qty.....4</p>	<p><b>4</b></p> <p>Spacer</p>  <p>OD: 25.4mm, ID: 9mm, L: 80mm Qty.....2</p>	<p><b>4</b></p> <p>Nylock Nut</p>  <p>M8.....DIN 985 Qty.....2</p>
--	--	--	--	---

## Step One

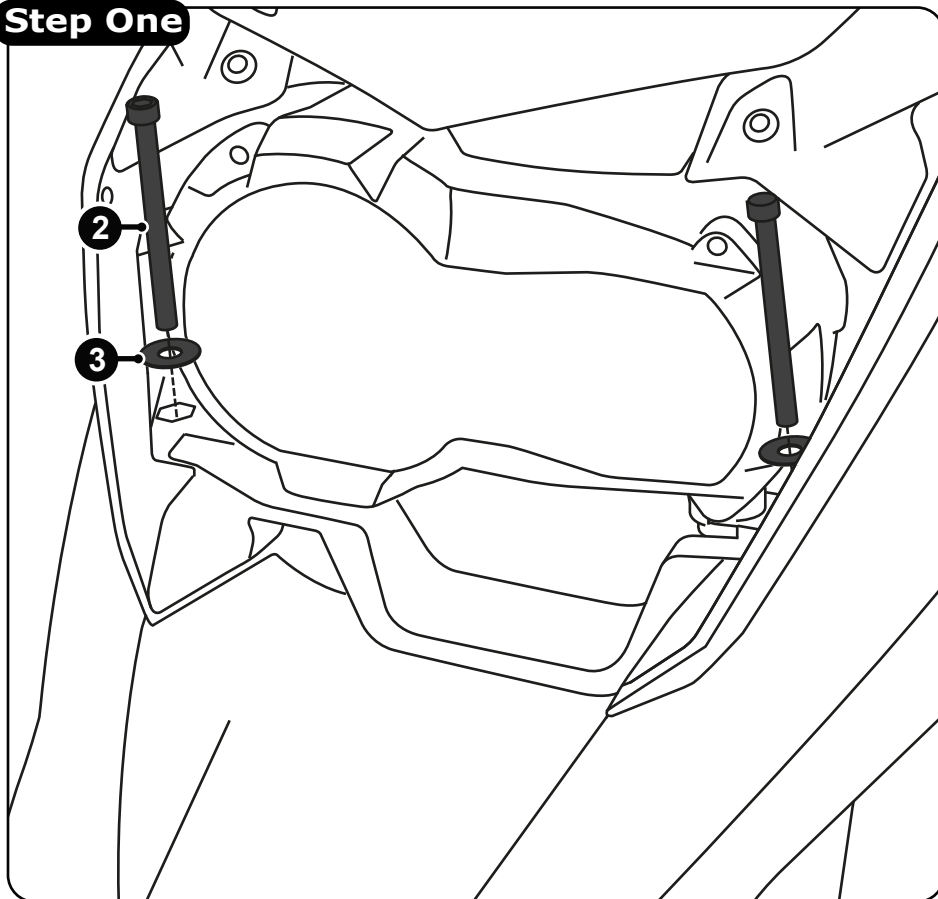

## Step Two

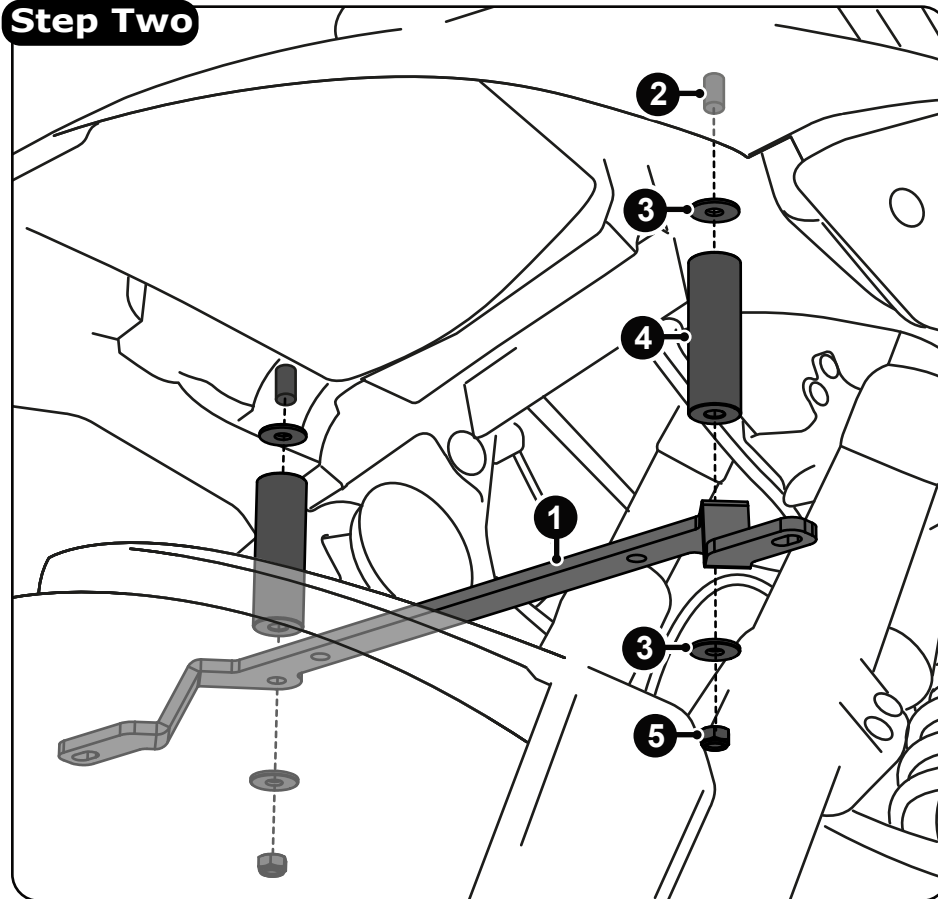

**Step One:** Place the M8 screws with washers into the openings found on either side of the headlight.

**Step Two:** Place the spacers over the M8 screws protruding from the underside of the front fender, then mount the bracket in place using the supplied hardware.