



FITTING INSTRUCTIONS FOR SP0057BK SWING-ARM PROTECTORS

BMW S1000RR 2010-14/ HP4

SUZUKI GSXR 1000 2005-,GSXR 750 2006-,GSXR 600 2006-

**ONLY TO BE USED ON MACHINES FITTED WITH SPINDLE MEASURING
16mm AND 23.5mm LOCATION DIAMETERS**

THIS KIT CONTAINS THE ITEMS PICTURED AND LABELLED BELOW.
DO NOT PROCEED UNTIL YOU ARE SURE ALL PARTS ARE PRESENT.

**Please note that the way the kit is packed does not necessarily represent the way of
mounting to the bike**

THE PARTS SHOWN MAY BE REPRESENTATIVE ONLY (FOR CLARITY OF INSTRUCTIONS ONLY)





RIGHT HAND SIDE

Please note that in cases where kits are packed with rubber washers holding the components onto the bolt – *the rubber washers should be thrown away!*

TOOLS REQUIRED

- 4mm metric Allen key.

Left-hand side (as you sit on bike)

- Fit the shorter counter sunk bolt through the crash protector so head sits in counter-sink.
- Place the crash protector on to the smaller mounting block.
- Place special nut on exposed end of bolt so tapered face goes into recess of the mounting block.
- Tighten bolt until tapered portion of nut just contacts in the recessed face of the mounting block.
- Place this assembly into the left hand side of the rear wheel spindle.
- Tighten the bolt so crash protector is held in position firmly (do not over tighten).
- **Regularly check to ensure crash protector remains tight.**

Right-hand side (as you sit on bike)

- Fit the longer counter sunk bolt through the crash protector so head sits in counter-sink.
- Place the crash protector on to the larger mounting block.
- Place special nut on exposed end of bolt so tapered face goes into recess of the mounting block.
- Tighten bolt until tapered portion of nut just contacts in the recessed face of the mounting block.
- Place this assembly into the left hand side of the rear wheel spindle.
- Tighten the bolt so crash protector is held in position firmly (do not over tighten).
- **Regularly check to ensure crash protector remains tight.**



Instructions de montage pour SP0057 Protection Bras oscillant

BMW S1000RR 2010-14/ HP4


SUZUKI GSXR 1000 2005-,GSXR 750 2006-,GSXR 600 2006-

Seulement sur les machines qui ont un axe mesurant 16mm et 23.5mm de diamètre

**LE KIT CONTIENT LES ARTICLES EXPOSES CI-DESSOUS, VERIFIER QUE TOUTES LES PIECES SOIENT PRESENTES
AVANT DE PROCEDER AU MONTAGE.**

LA FAÇON DONT LE KIT EST EMBALLE NE CORRESPOND PAS FORCEMENT A LA FAÇON DE MONTER LES PIECES SUR
LA MOTO.

LES PIECES PRESENTEES PEUVENT N'ETRE QUE REPRESENTATIVES, AFIN DE FACILITER ET CLARIFIER LES
INSTRUCTIONS DE MONTAGE.

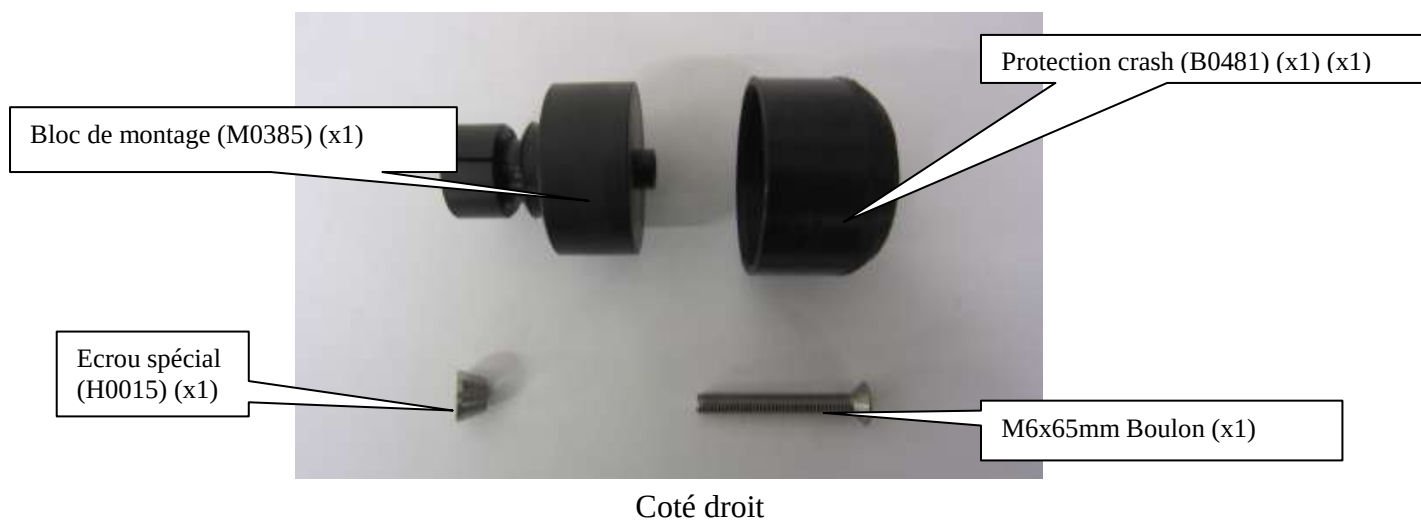



NOTEZ QUE SI LES KITS SONT EMBALLES AVEC DES RONDELLES EN CAOUTCHOUC SERVANT A TENIR LES COMPOSANTS, CES RONDELLES DOIVENT ETRE JETEES.

Outils requis

- Clé Allen 4mm.

Coté gauche assis sur la moto:

- Insérer le boulon à travers la protection crash de façon à ce que la tête aille dans le contre alésage.
- Placer la protection crash sur le plus petit bloc de montage..
- Placer l'écrou spécial sur le filetage exposé du boulon de façon à ce que la face conique aille dans le creux du bloc de montage.
- Serrer le boulon jusqu'à ce que la partie conique de l'écrou rentre en contact dans le creux du bloc de montage.
- Placer cet ensemble du coté gauche de l'axe de roue arrière.
- Serrer le boulon pour que la protection crash soit maintenue en position (ne pas bloquer).
- **Vérifier le serrage régulièrement.**

Coté droit assis sur la moto:

- Insérer le boulon à travers la protection crash de façon à ce que la tête aille dans le contre alésage.
- Placer la protection crash sur le plus large bloc de montage..
- Placer l'écrou spécial sur le filetage exposé du boulon de façon à ce que la face conique aille dans le creux du bloc de montage.
- Serrer le boulon jusqu'à ce que la partie conique de l'écrou rentre en contact dans le creux du bloc de montage.
- Placer cet ensemble du coté gauche de l'axe de roue arrière.
- Serrer le boulon pour que la protection crash soit maintenue en position (ne pas bloquer).
- **Vérifier le serrage régulièrement.**