



# Installation

Model specific instructions

For:

- BMW R1250GS
- BMW R1250GSA
- BMW R1250RT
- BMW R1250R

These instructions are a model specific add-on to the general BoosterPlug installation instructions.


## Installation Tips

- Remove the righthand side gas tank shielding (Next to your right knee when you sit on the bike)
- Locate the AIT sensor in the air filter box.
- The pictures below should help you locate the sensor.
- NOTE: On the R1250GSA the installation is more time consuming because you will have to slide the large gas tank slightly backward to access the AIT sensor, or remove the gas tank completely.
- Install the BoosterPlug module as per the general installation papers.
- You have several choices for the sensor location, but our favorite place is near the steering head or under the head light. Next to the airbox snorkel air intake hole is another very good spot.

## Pictures

For:

- BMW R1250GS
- BMW R1250GSA
- BMW R1250RT
- BMW R1250R

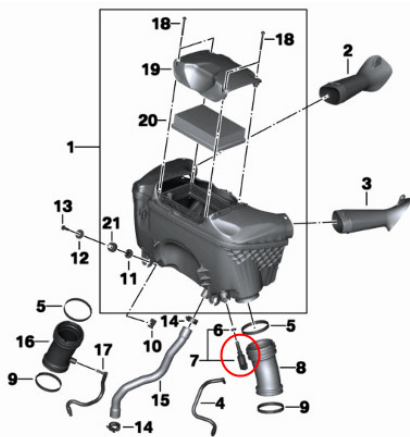

For:

For BMW R1250RS - please download separate instruction sheet.