



EVOTECH®
P E R F O R M A N C E

Installation Instructions




BMW R NINE T 2014 SWING ARM PROTECTION


Product Reference - 11849


Kit Contents

- Ⓐ 1 x Swingarm Protector
- Ⓑ 1 x M6 - 35 Cap Head Screw
- Ⓒ 1 x M6 Flange Nut
- Ⓓ 1 x Expansion Tube

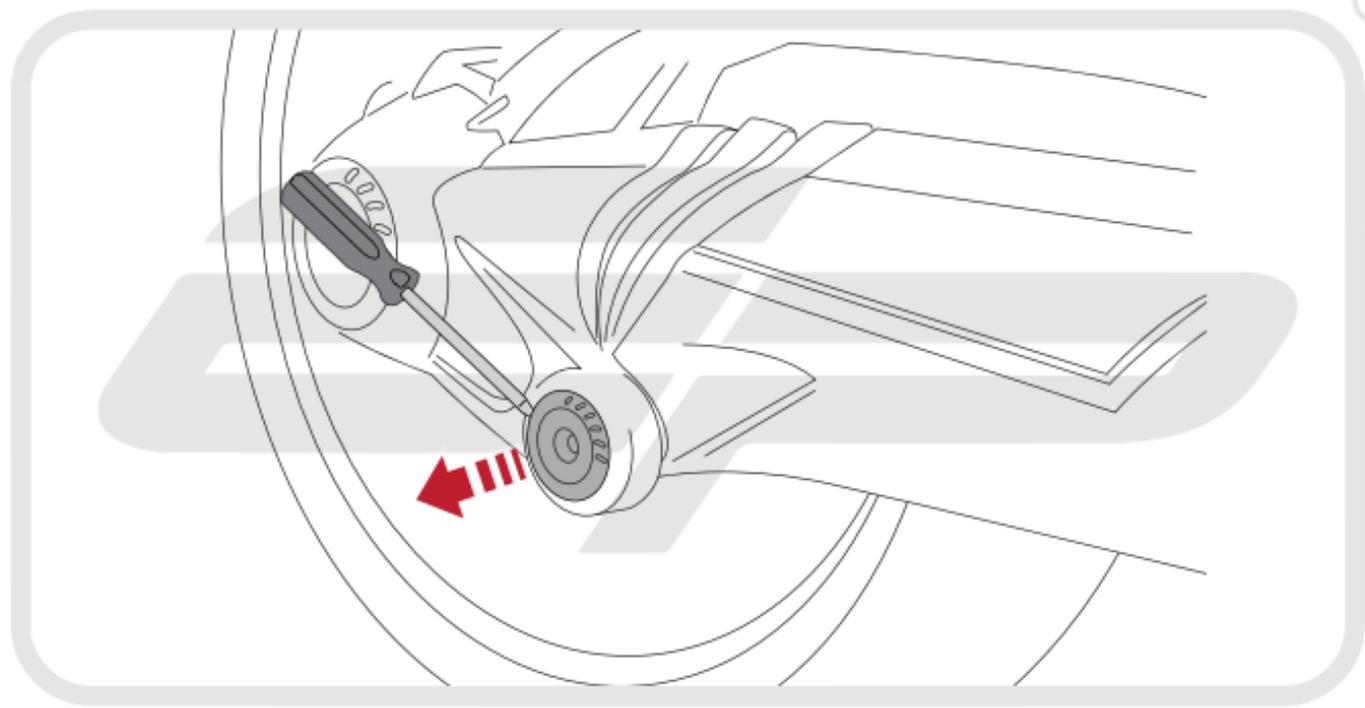

Tighten nut and screw until
the rubber expansion tube is
firmly gripped

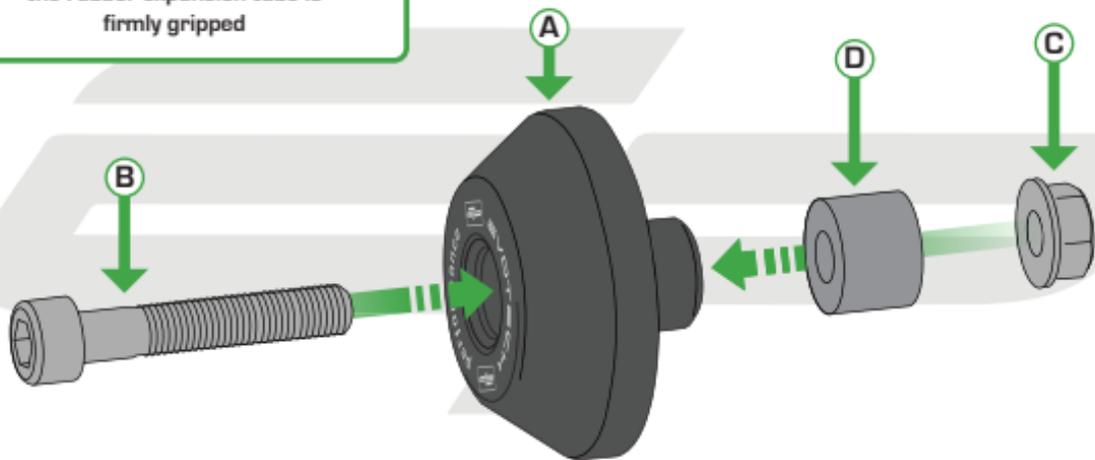

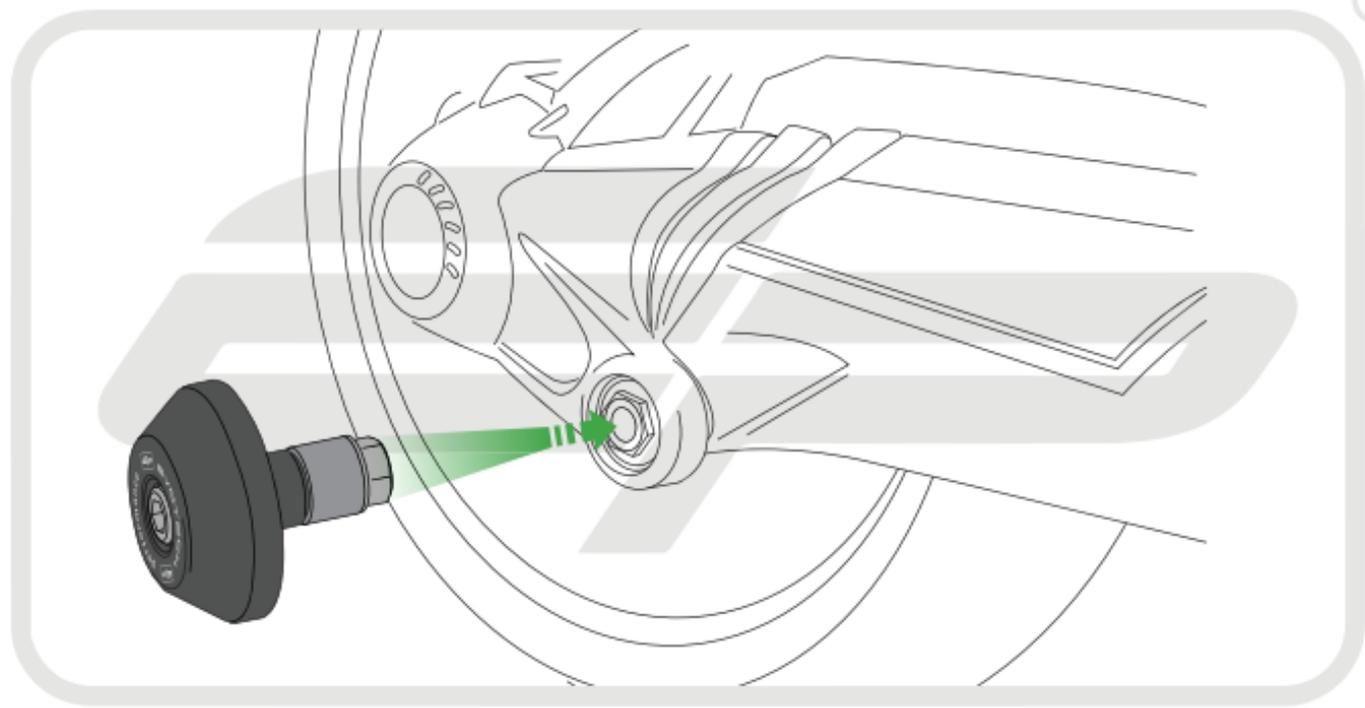

Fully Tighten Screw until
Swing Arm Protector is
held firmly





 **ESSENTIAL CHECKS** 

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com