




BMW R NineT Scrambler
Front Spindle Bobbins


Installation Instructions





Kit Contents PRN014598

- (A) 1 x Spindle Nut
- (B) 1 x Spindle
- (C) 1 x Spacer
- (D) 2 x Bobbin Heads
- (E) 2 x M8 Washers
- (F) 2 x M8 Nuts

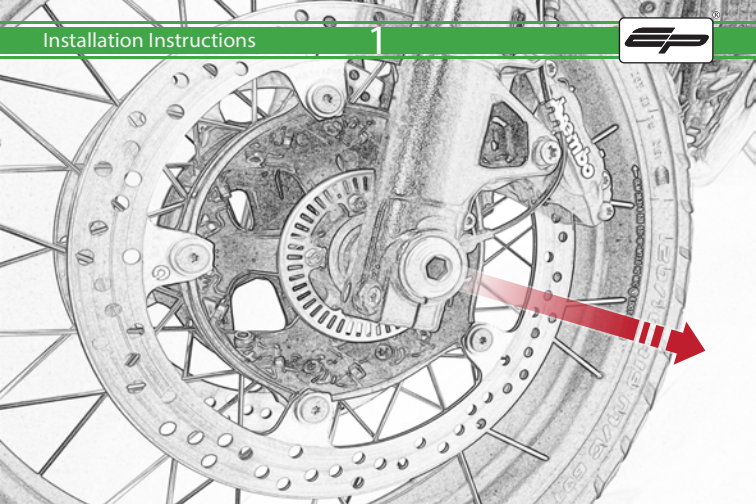


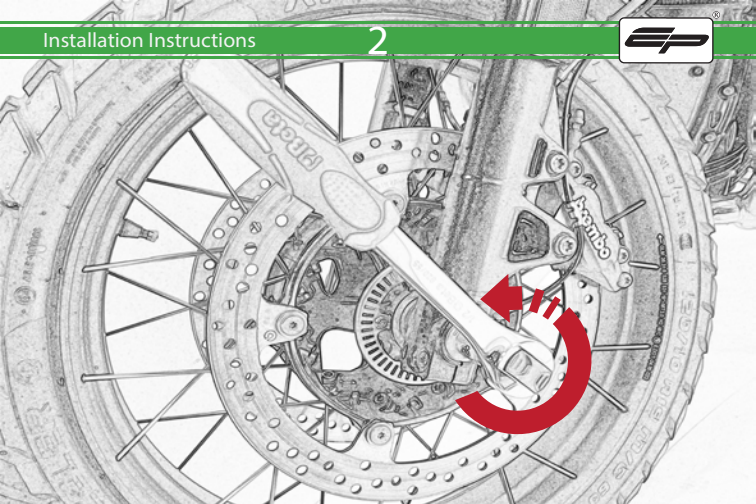


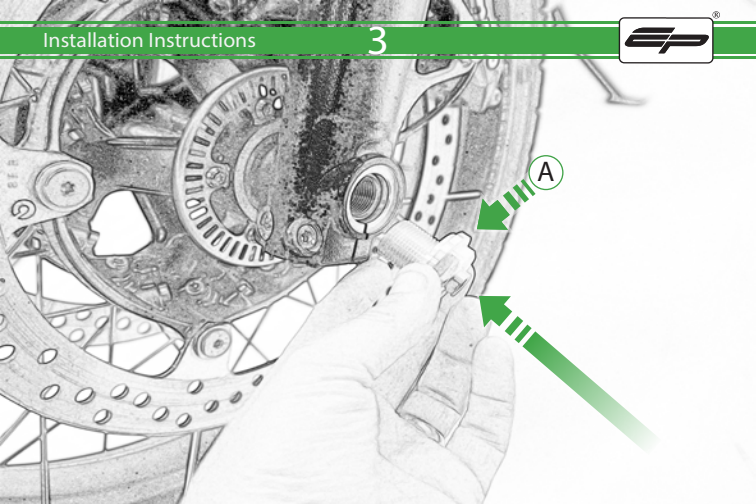



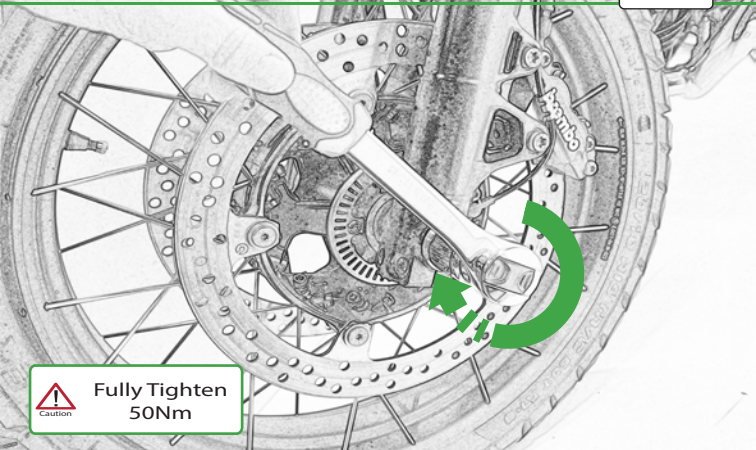



**Fully Tighten
50Nm**

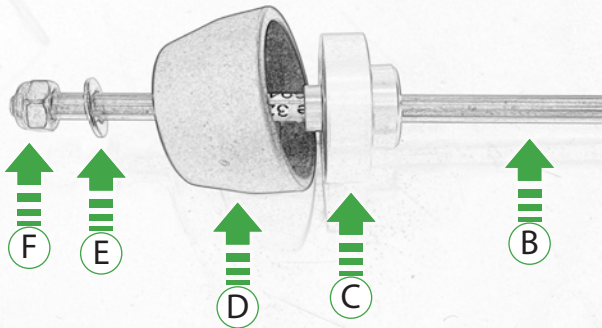

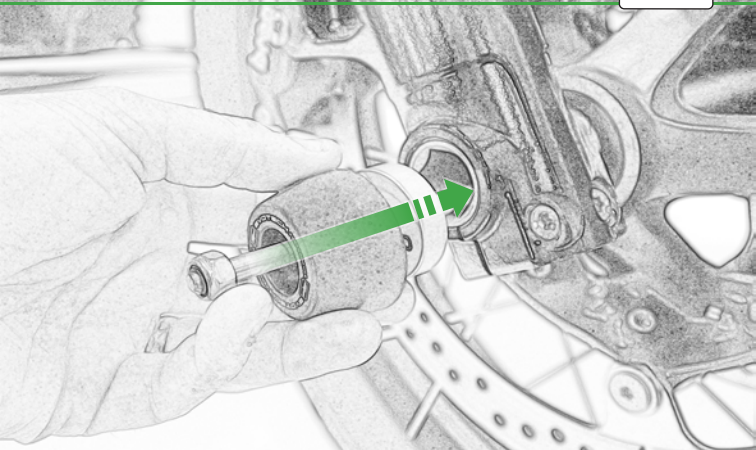

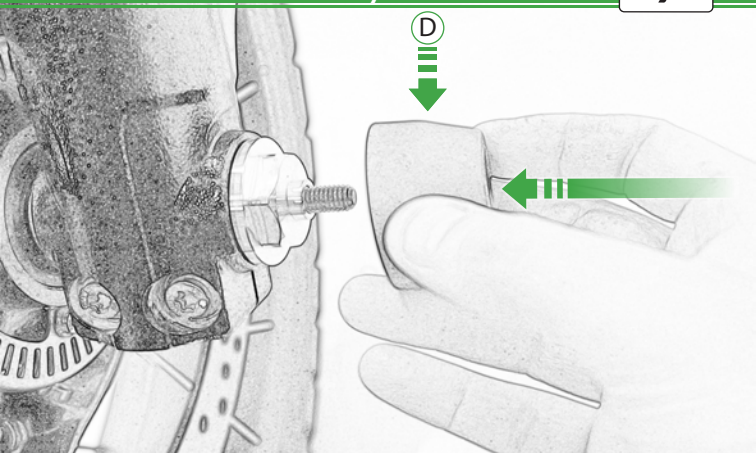

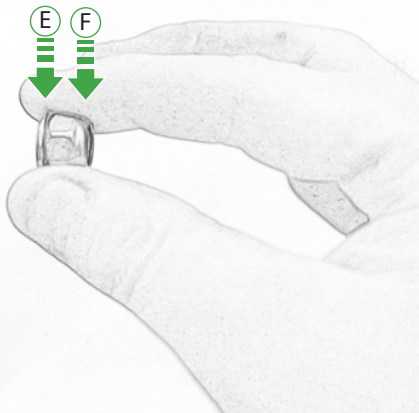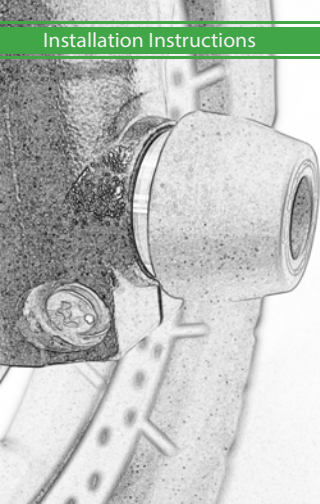

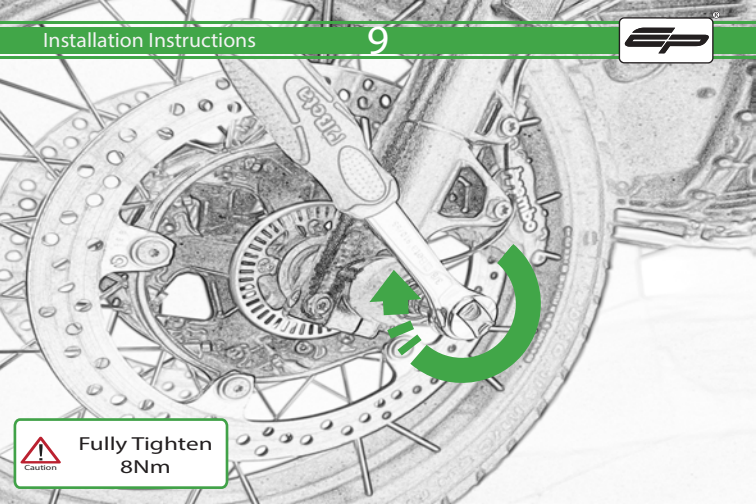

Fully Tighten
8Nm

ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that all bolts are tightend to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com