



**CROSSPRO**  
PROTECTION PARTS



**Trail Crash Bar Aluminium**  
**BMW GS 1200 – 2008/12**  
Ref: 2CP1250010

**Cross-Pro - Componentes para Motociclos, Lda.**  
Rua do Vale – Travassô 3750-753 Águeda  
Telf.: 234 629 044 Fax: 234 608 717  
e-mail: geral@crosspro.pt web: www.crosspro.pt

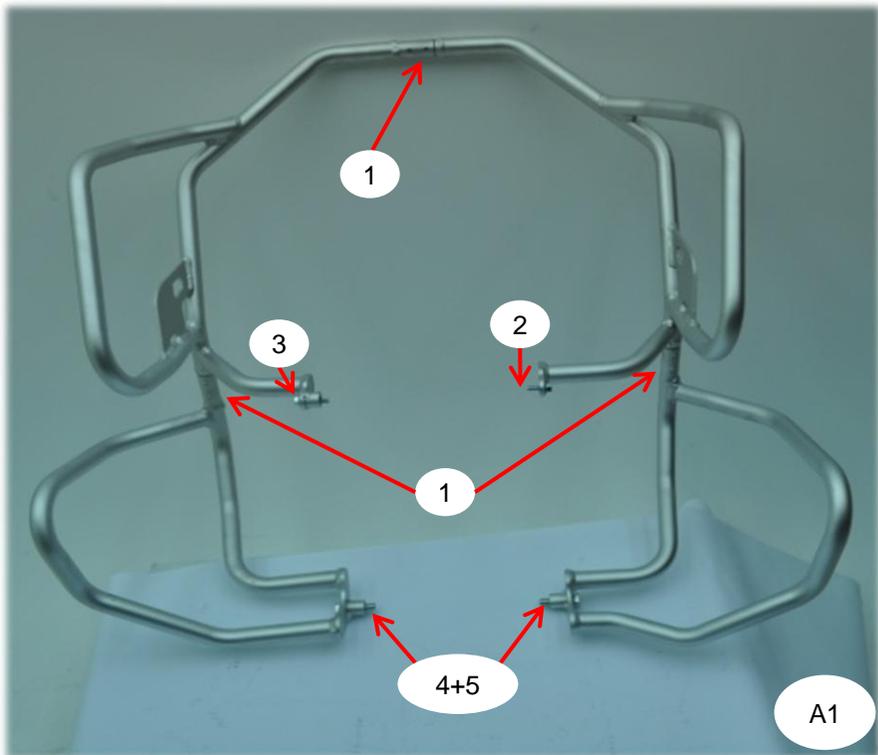

| Item N° | Reference | Component                   | Description     | Quant. |
|---------|-----------|-----------------------------|-----------------|--------|
| 5       | -         | Washer                      | M 10            | 2      |
| 4       | -         | Screw Hexagonal Head        | M 10 X 1.5 X 40 | 2      |
| 3       | -         | Hex Screw with washer false | M 6 X 30        | 1      |
| 2       | -         | Hex Screw with washer false | M 6 X 20        | 1      |
| 1       | -         | Socket head Cap Screw       | M 6 X 16        | 6      |

**Attention** - Follow the installation sequence as you can see in the photos .

**(Photo A)** You can see the complete right and Left side of the protection mounted in the bike , it is made of four parts, you can see where will be applied all components.

**(Photo B1)** Assemble the two parts of the right side using Item N°1.

**(Photo B1, C1 and D1)** Mount the protection on the bike as shown, use Item N°2, Item N°4 and Item N°5.

Perform this same sequence to mount the left side.

**(Photo F1)** To finish the assembly use Item N°1 to unite the two sides of the protection (left and right)

