

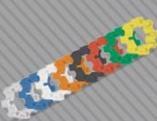



**CROSSPRO**  
PROTECTION PARTS




**Trail Crash Bar Aluminium**  
**BMW GS 1200 - 2013**  
Ref: 2CP1250015

**Cross-Pro - Componentes para Motociclos, Lda.**  
Rua do Vale – Travassô 3750-753 Águeda  
Telf.: 234 629 044 Fax: 234 608 717  
e-mail: geral@crosspro.pt web: www.crosspro.pt

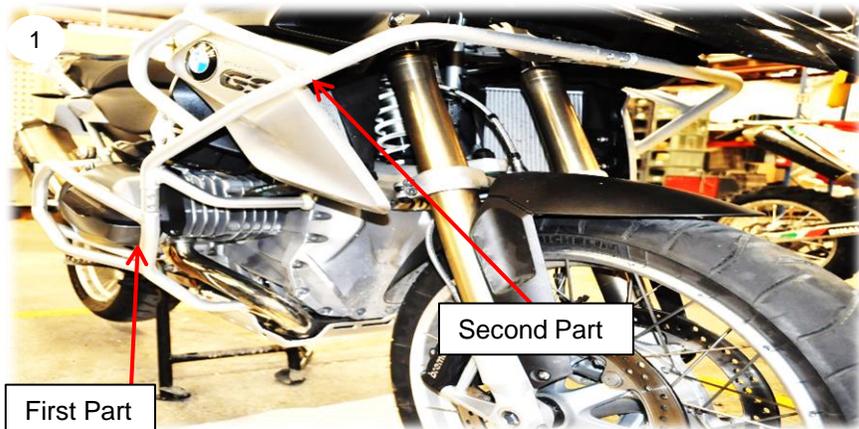

1  
First Part

Second Part

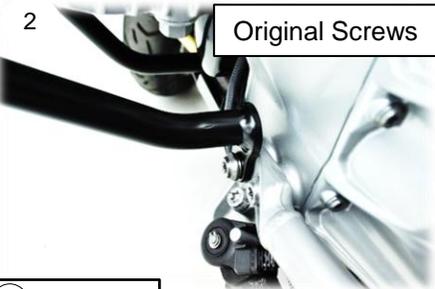


2  
Original Screws



3

A

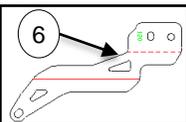


6

6	Clamp Inox (3mm)	N°120	1
5	Nut Nylok	M8	3
4	Washer	M8	3
3	Socket Head Cap Screws	M8 x 25	3
2	Socket Head Cap Screws	M8 x 30	2
1	Socket Head Cap Screws	M6 x 16	6
Item N°	Component:	Description:	Quant.

**Attention** - Follow the installation sequence as you can see in the photos  
**(1<sup>st</sup> Photo)** You can see the complete right side of the protection mounted in the bike, it is made of two parts  
**(2<sup>nd</sup>, 3<sup>rd</sup> and 4<sup>th</sup> photo)** Apply the first part of the protection using original screw and screw Item N°2 in photo 3, point A.  
**(5<sup>th</sup> photo)** Apply the second part for the protection using screws Item N°1 to unite to the first part of the protection, point B.  
**(6<sup>th</sup> and 7<sup>th</sup> photo)** Loosen the screws (point C) and apply the fixing stainless N°120 (item 6); using to fix the items N°3,4 and 5.  
**(8<sup>th</sup> photo)** To finish the assembly use Item N°1 to unite the two sides of the protection (left and right), point D. Tighten all screws.




4

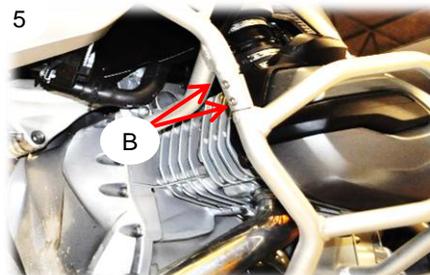

5

B

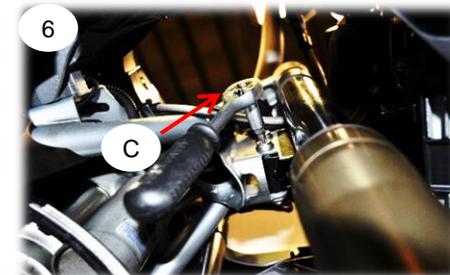


6

C



7

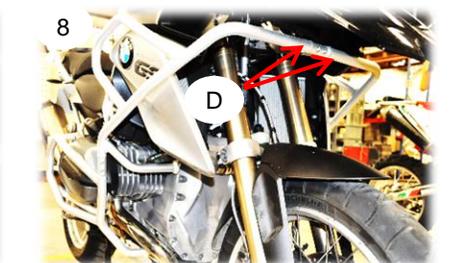

8

D