
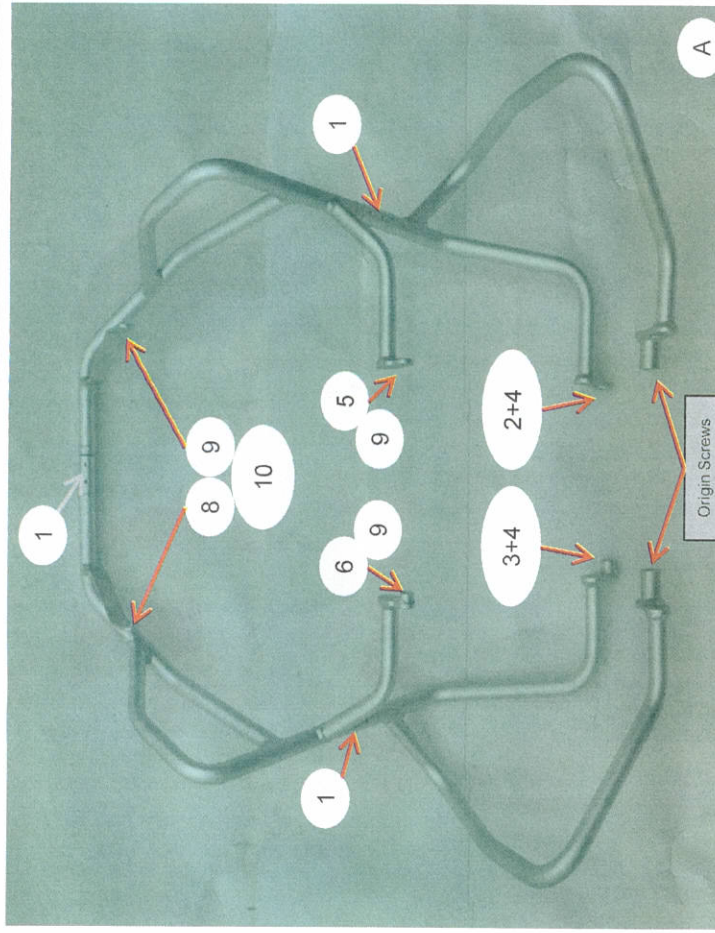
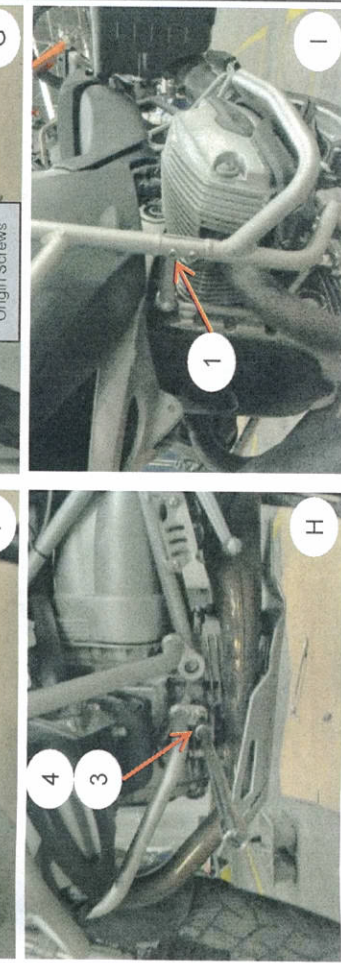
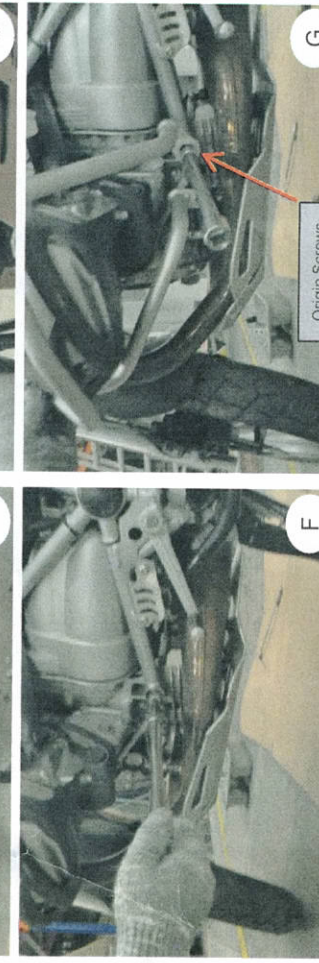
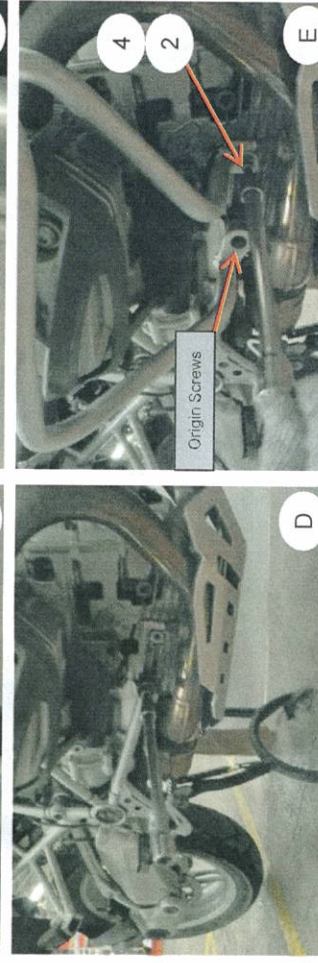


Trail Crash Bar Aluminium
BMW GS 1200 <= 2007

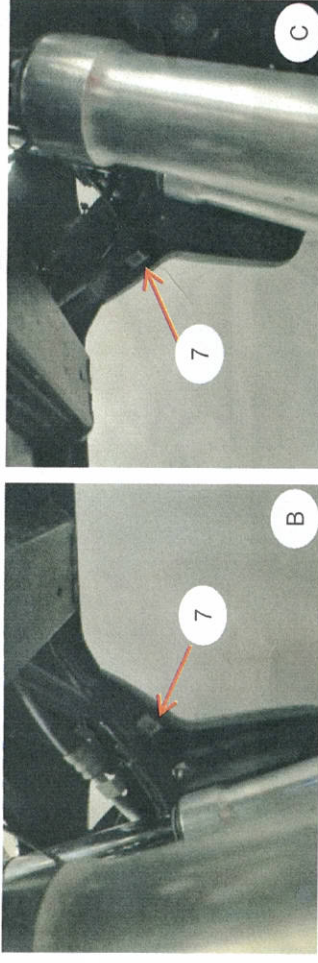

Item N°	Reference	Component	Description	Quant
11		Round Tube Plastic Inserts Ø 25 mm		2
10		Hexagonal Head Screw	M6x25	2
9		Washer Large INOX	M6	4
8		Bushing PEHD	Ø20xØ3x10 mm	2
7		Clip Inox	M6	2
5		Hexagonal Head Screw with washer false	M6x30	1
5		Hexagonal Head Screw	M6x16	1
4		Washer	M10	2
3		Socket head Cap Screw	M10x1.5x30	1
2		Socket head Cap Screw	M10x1.5x20	1
1		Socket head Cap Screw	M6x16 DIN 912	6

Attention - Follow the installation sequence has you can see in the photos. Do the entire Assembly by applying all items, apply the screws without adjusting or give only grip position.

(Photo B, C) Apply Item N°7, behind the front headlight. (Photo D) Remove screw.

(Photo E) Apply lower right protection, use Original Screw and Item's N°2 and N°4.

(Photo F) Remove screw.

(Photo G, H) Apply lower Left Protection, use Original Screw and Item's N°3 and N°4.

(Photo I) Apply protection Sup. Left, use Item N°1

(Photo J) Secure protection in the Item N°7 previously applied, Use Item's N°8, N°9 and n°10.

(Photo K) Apply Item's N°6 and N°9

(Photo L) Apply protection Sup. Right, use Item N°1

(Photo M) Secure protection in the Item N°7 previously applied, Use Item's N°8, N°9 and N°10.

(Photo N) Apply Item's N°5 and N°9

(Photo O) Apply Item N°1 to join the two protections

(Photo P) Only once you have everything mounted then adjust and tighten all screws.

(Photo Q) Apply pieces of protection see specific schema



Trail Crash Bar Aluminium BMW GS 1200 <= 2007

Ref: 2CP125003A

Cross-Pro - Componentes para Motociclos, Lda.
Rua do Vale - Travassô 3750-753 Águeda
Telf.: 234 629 044Fax: 234 608 717
e-mail: geral@crosspro.pt web: www.crosspro.pt

