




## 089403 BMW R-Nine-T Frame End Caps Fitting Instructions (all model variants)

### Kit Includes:


X1 35mm Cap (2 ribs)	CBUNG026
X2 35mm Cap (3 ribs)	CBUNG023
X2 28.6mm Cap	CBUNG017
X2 26mm Cap	CBUNG013
X1 22mm Cap	CBUNG004

- Ensure holes are free from debris, dirt & moisture before fitting.
- Area highlighted **RED** in figure B is the R-Nine-T's throttle housing assembly, this may need to be removed to gain access to the frame hole for **CBUNG013**.

**A**

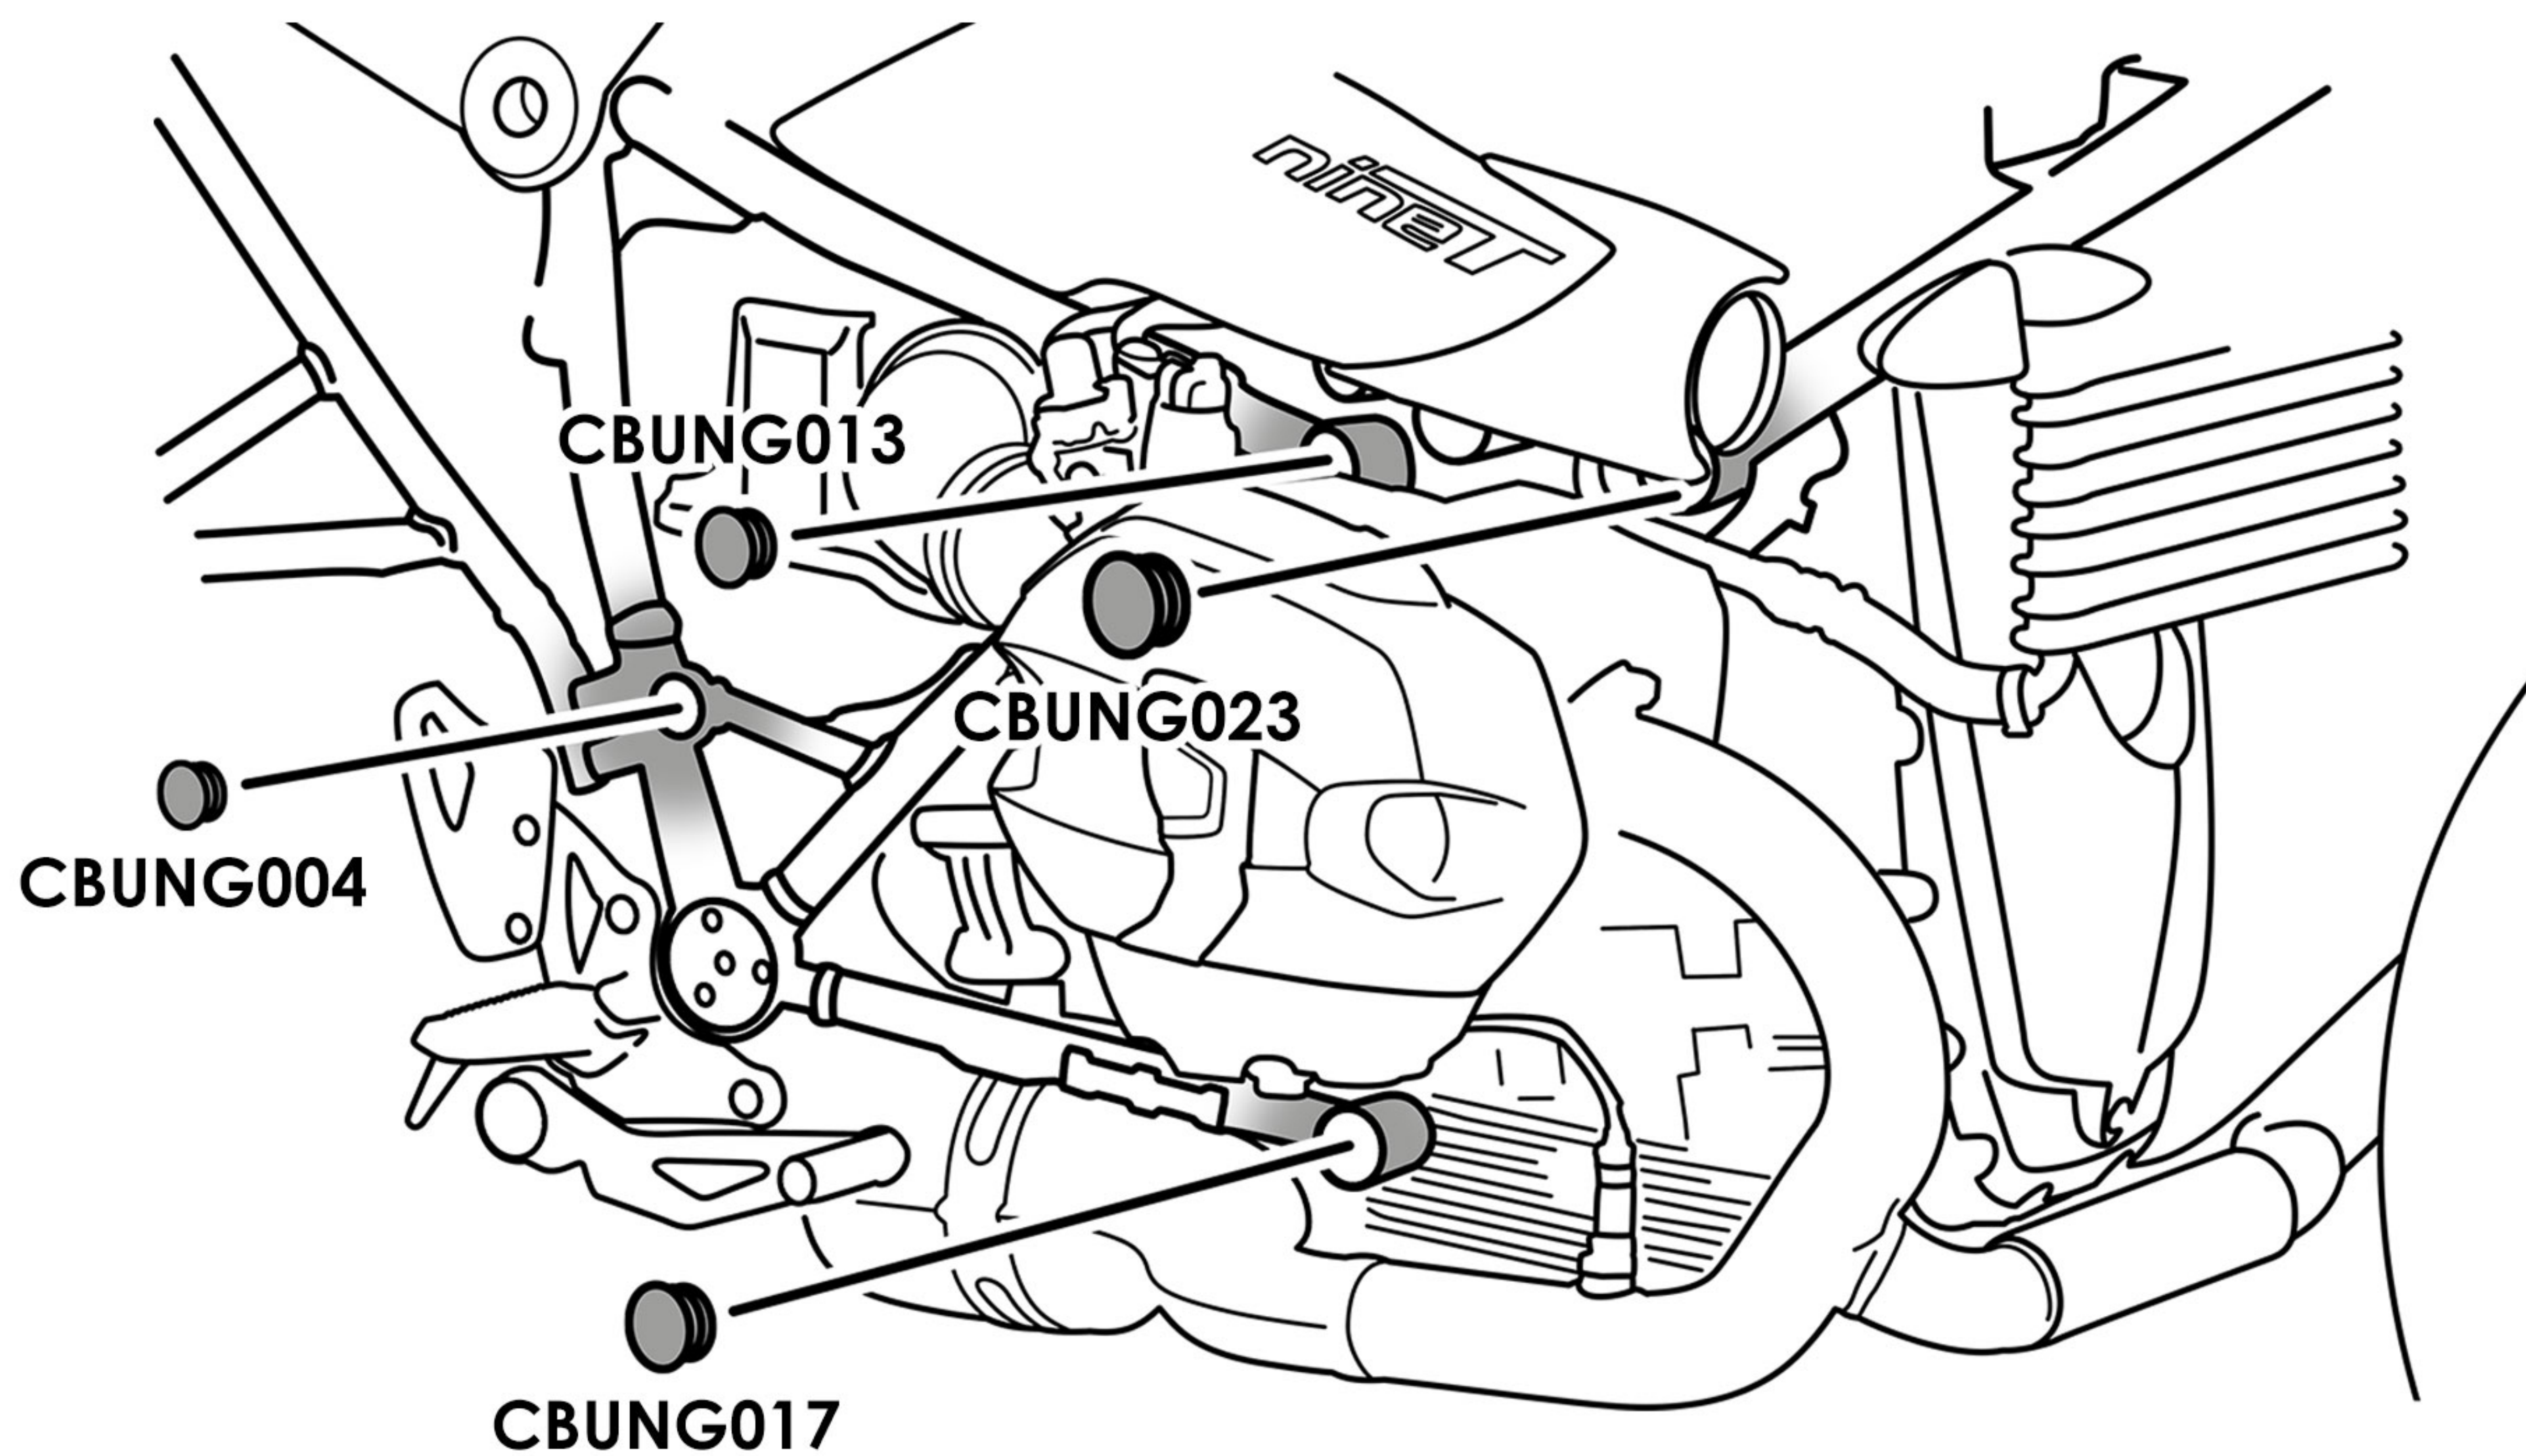

**B**

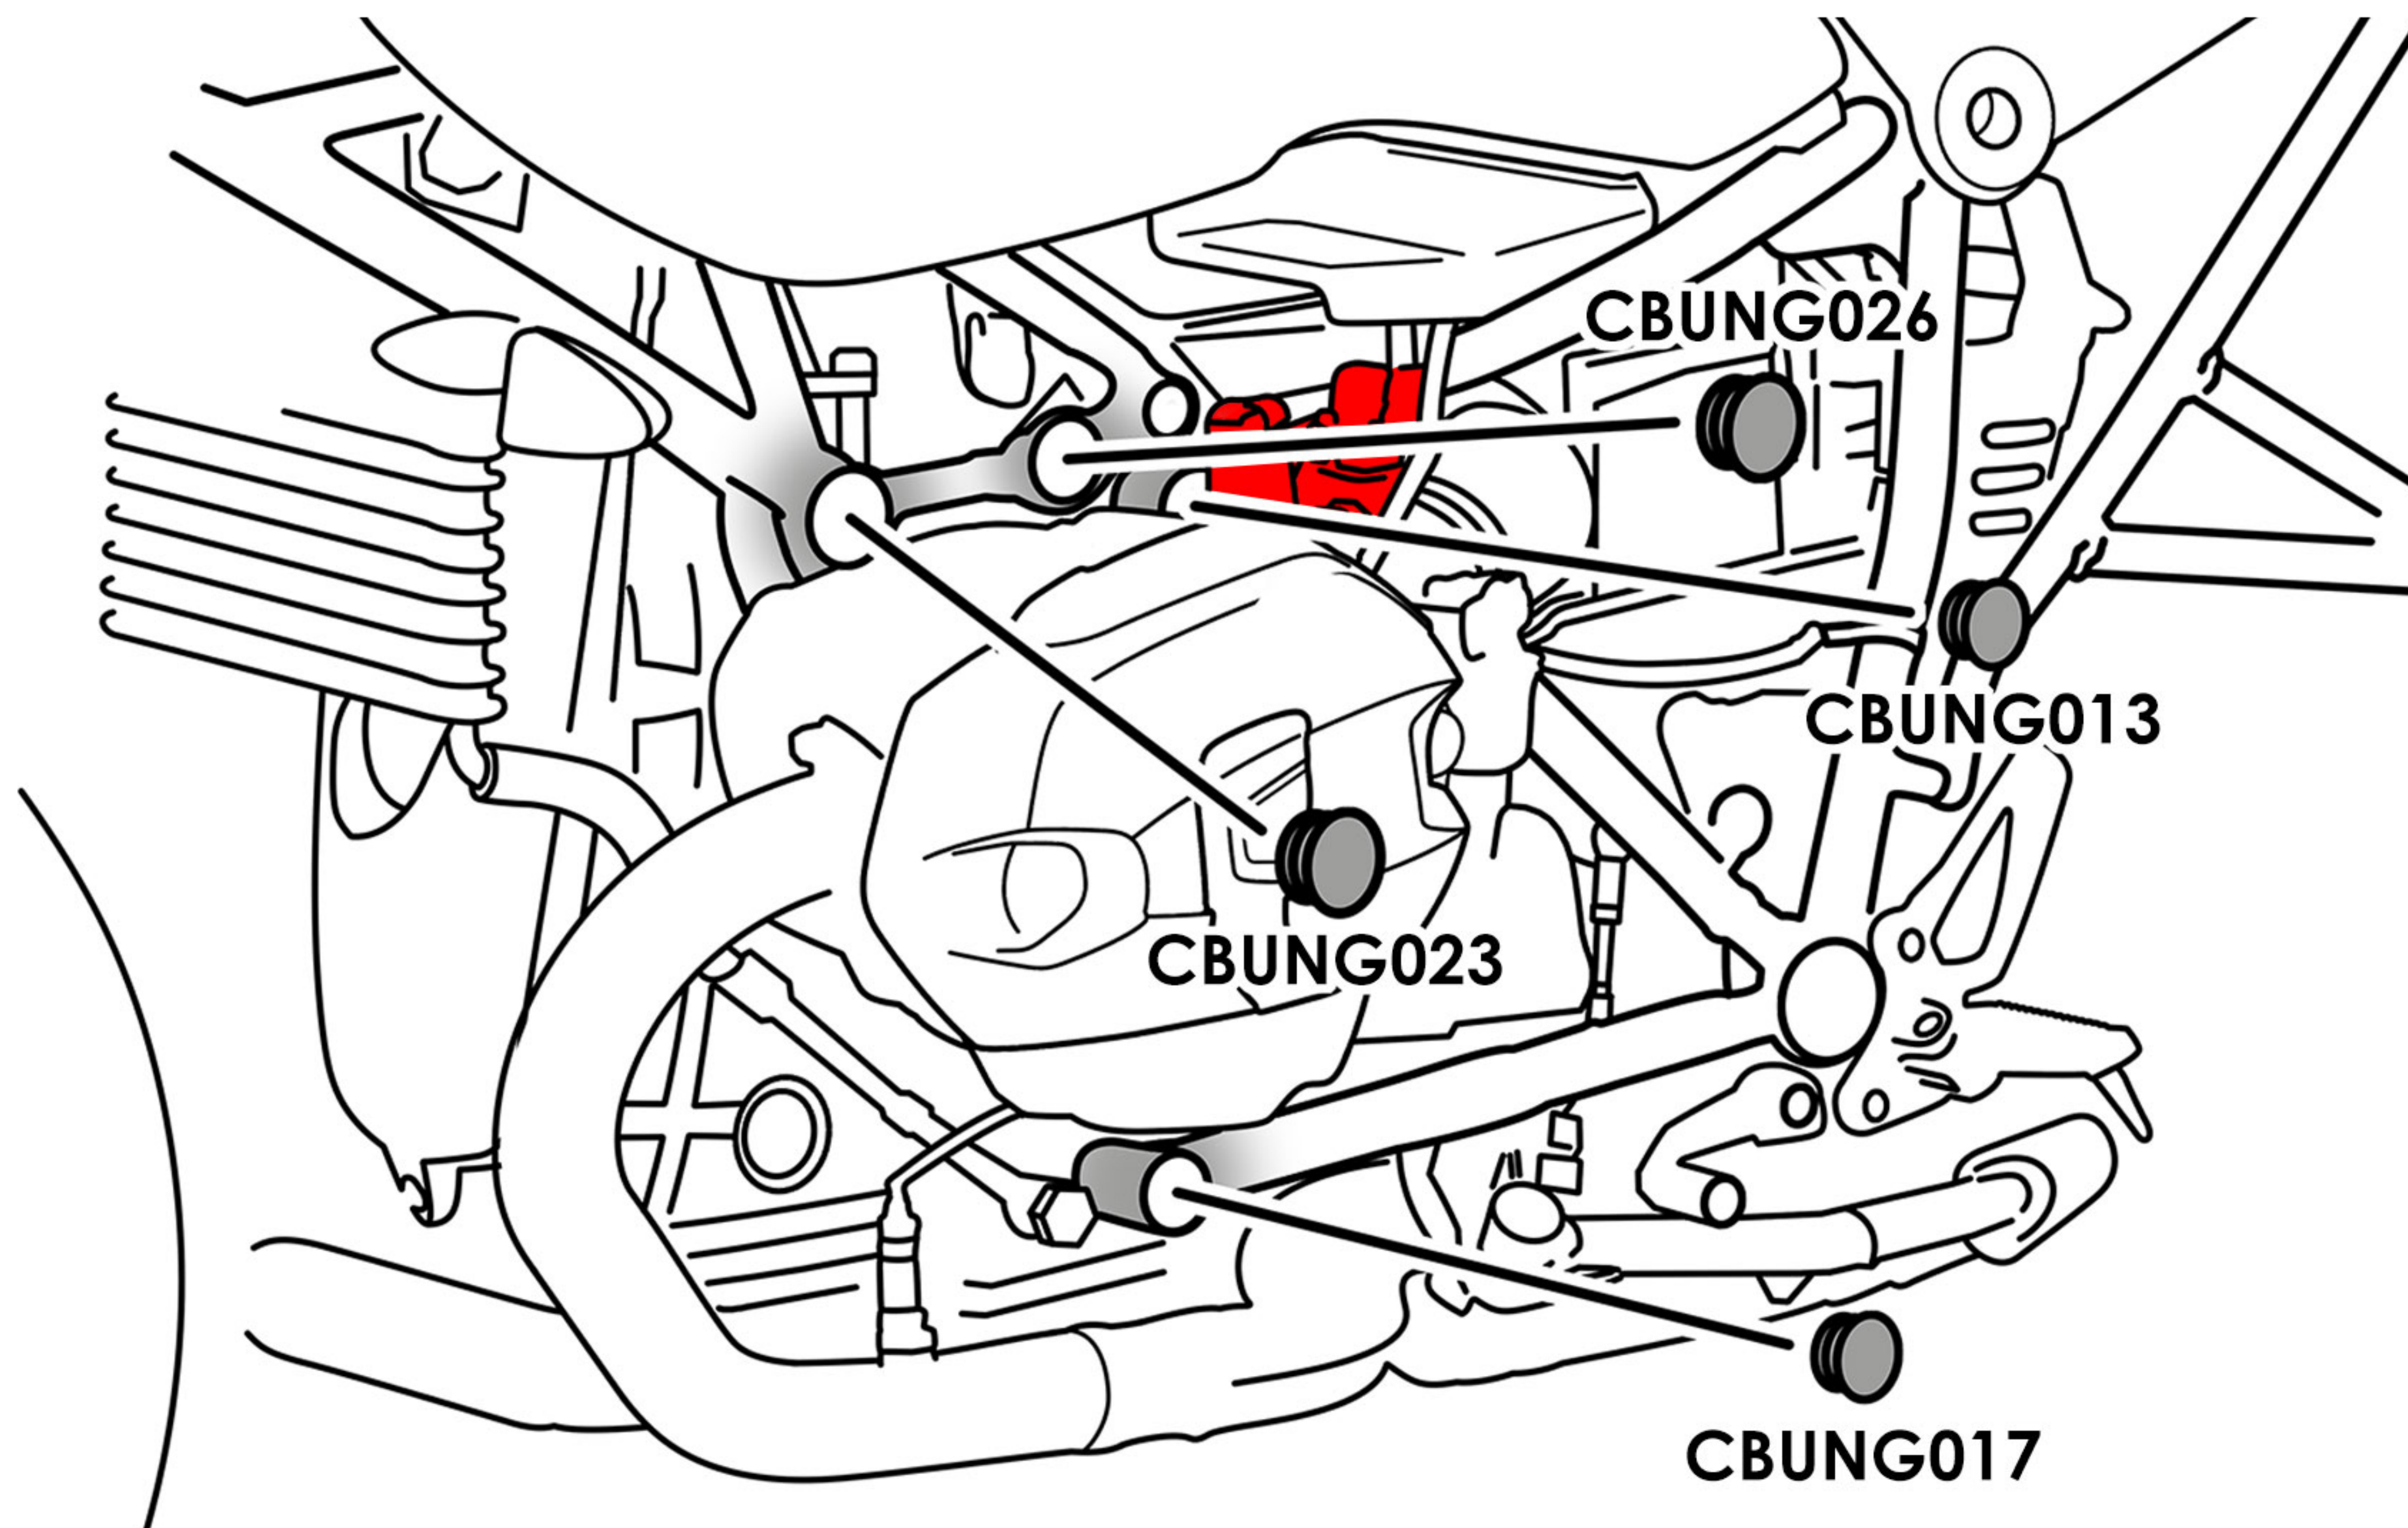

Contact us:

[sales@pyramid-plastics.co.uk](mailto:sales@pyramid-plastics.co.uk)

+44 (0)1427 677990

[www.pyramid-plastics.co.uk](http://www.pyramid-plastics.co.uk)

Follow us on social media and feel free to leave us a review!

