



Fitting Instructions HUGGER BMW F800R

Code # 07412

Please read these instructions in full before fitting

Kit Contents:

- 2 x M6 x 20 flanged button head socket screws
- 2 x M6 x 25 “ “ “ “ “
- 4 x M6 flat washers
- 4 x rubber grommets
- 4 x metal spacers
- 1 x 1 metre plastic edge trim
- 2 x 100mm cable ties

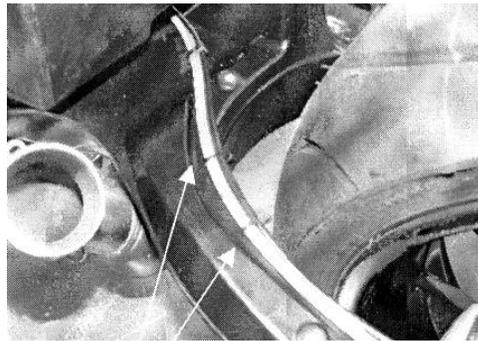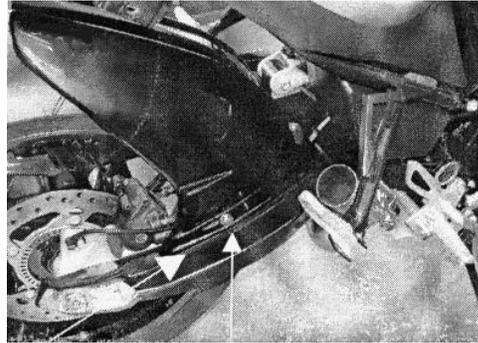

- Remove Chainguard
- You may wish to remove the silencer to aid access to the forward mounting point but it is not essential.
- Remove the plastic brake/abs cable guide from the front left hand face of the swinging arm
Note: retain the original BMW short spacer from the front bolt
- Cut and fit the plastic edge trim to the left and right lower edges of the Hugger. - Warm first for ease of application
- Fit the four rubber grommets into the holes in the Hugger
- Press the four steel spacers into the grommets
- Take the retained BMW short spacer and push it into the top of the forward most grommet.

This facilitates a 'stand off' required for the forward mounting point by pushing the lower spacer partially out.

You can now attach the Hugger. Fit bolts finger tight until all are installed

- Start with the forward most M6 x 25 bolt at the front of the swinging arm. Then the other M6 x 25 bolt on the left side of the bike. Finally the two M6 x 20 bolts that attach the chainguard side.
- Tighten all four bolts ensuring there is clearance between the Hugger and tyre.
- If the Hugger requires slight adjustment to achieve clearance, remove the left hand bolt and fit flat M6 washers – quantity as required - between the swinging arm and the underside of the Hugger fixing point. Re-fit and tighten the M6 x 25 screw.